

CleverDeck® Original Care & Cleaning Recommendations

CleverDeck Original composite decking is virtually maintenance free, needing only periodic cleaning to keep it looking great however just like timber it can scratch and stain so please read the following notes.

Initial Weathering and Removal of any Residual Tannins

Your CleverDeck Original composite decking boards are made from a combination of recycled plastic, hardwood flour and rice husks.

When new there may be some residual tannin in the wood flour component of your decking boards. This tannin will leach out of the board the first few times that the deck board is wet and will appear as a stain after the board has dried. This (tannin) stain can be removed by washing with water if required otherwise it will normally disappear after the board has been wet/dried several times.

You will also notice a softening of the surface colour as the board is exposed to the weather over the first 4-12 weeks. This natural weathering effect varies across the colour range.

Water marks

Your CleverDeck Original composite decking boards should be installed on a sub frame that allows for a fall of approximately 4mm for every metre.

This will ensure that any residual water will be able to run off the deck and not sit on the boards making a puddle. If water does pool on the deck boards and then slowly dries off/evaporates a water stain may result, the stain is easily washed off, but it will be likely to reoccur each time a pool of water is left to dry on the deck boards.

General Cleaning

Don't forget to give your new CleverDeck Original deck a thorough cleaning after it has been installed to remove any manufacturing lubricants and the dirt and grime associated with the installation of the deck.

Like any floor in your home CleverDeck Original composite decking looks best when it is kept clean. Sweeping with a broom should be undertaken regularly. More thorough washing of the deck should be based on the amount of organic debris that ends up on your deck via overhanging or nearby vegetation as well as airborne dust, general dirt and grime that builds up from regular foot traffic.

Futurewood recommends using the specially formulated "Futurewood Composite Timber Cleaner" a minimum of 4 times per year and more often if the deck gets particularly dirty. The cleaner can be used at different strengths depending on how dirty your deck is (refer to the cleaner label for instructions). You can call Futurewood on 1300 484 308 or email info@futurewood.com.au to source this product.

A thin film of oxidised material may also build up on your deck over time if it is not used or cleaned regularly. This will show when you wash the deck by discolouring the water. Strong colours like Mahogany

and Slate Grey will turn the cleaning water a similar colour particularly if they have not been washed for some time and the oxidised layer is able to build up.

You can use a pressure washer to clean your deck but do not run this at greater than 8Kpa (1200 PSI) or position the nozzle within 300mm from the deck surface otherwise this may mark the surface of the deck.

Mould and Mildew

CleverDeck Original has a fungicide added in to the formulation to help reduce the incidence of mould or mildew growing in the boards.

However, as mould spores are transmitted through the air they can easily grow on any surface under the right climatic conditions. As mentioned under general cleaning Futurewood recommends that you regularly sweep your deck and periodically wash any dirt and debris from the surface using Futurewood Composite Timber Cleaner making sure that twigs and leaves do not build up between the boards. Regular cleaning will help to reduce the likelihood of mould or mildew growing on the deck surface.

If mildew starts to grow on your deck (typically characterised by a green tinge) we recommend that you sweep the deck with a stiff bristled broom and then wash down the surface of your deck thoroughly using a solution of Futurewood Composite Timber Cleaner. If mould starts to grow on your deck (typically characterised by black/grey spots) we recommend that you apply a solution of "Wet & Forget" (contact Wet and forget directly 02 9986 2126) to the surface of your deck making sure that you follow the manufacturer's instructions and recommendations for use.

Please note many harsh household chemical cleaners that can be used to remove mould or mildew in the home may not be suitable for composite timber and may cause severe damage to the board surface if used.

Scratching

Just like timber, CleverDeck Original boards can be scratched by sharp objects. The machined finish and grain pattern on the surface of CleverDeck Original is designed to hide most minor scratches.

Claw marks from medium to larger dogs, sharp stones caught in shoe treads etc. can scratch the surface of your deck boards. These surface scratches are normally more pronounced on newer decks and from different angles depending on the light. Washing with a power washer (set on low and not too close to the deck surface) normally disturbs the surface fibres enough to further camouflage these scratches or else they tend to become less visible over time. Be careful not to drag furniture or heavy items across your deck as this action may lead to significant scratches on the deck surface. Futurewood recommend that a protective mat or furniture pads are used to protect against contact from sources such as furniture legs, BBQs or planter stands. Larger scratches can be removed using a hand-held wire wheel and dragging or scraping the wheel over the face of the board in the direction of the grain.

Because the deck boards are double sided you also have the option of using the other side of your deck board if the scratch or damage to the top surface of the board is too deep to remove using the wire wheel. You can loosen the deck clips/screws and then turn the board/boards over if they have the same finish on both sides although the underside of your deck board will not have fully weathered so you will need to wait a few weeks before the "new side" of the deck board weathers back to a similar colour as the other boards on your deck.

Staining

CleverDeck Original composite decking has an open fibrous surface that will stain if oil, grease, wine, red clay, leaf matter (tannin) or rust remains on the surface for some time and penetrates the fibres.

The best method of removing stains relies on cleaning the area immediately after the stain occurs (before it soaks in to the cellulose fibre). Futurewood recommends using the specially formulated "Futurewood Composite Timber Cleaner" as a general cleaner. The cleaner can be used at different strengths depending on how dirty your deck is (refer to the cleaner label for instructions). You can call Futurewood on 1300 484 308 or email info@futurewood.com.au to source this

product. Alternatively, a strong solution of dishwashing detergent (without any added bleach) and hot water, applied immediately after the staining has occurred will remove most stains. If immediate cleaning is not possible or the stain has high fat/oil content the specially formulated "Futurewood Composite Timber Cleaner" used at a 4 to 1 strength will remove the stain but it might take 2-3 applications, then over several days the stain will lighten and then disappear. You can call Futurewood on 1300 484 308 or email info@futurewood.com.au to source this product. High pressure washing may also help to remove the stain however caution is required when using high pressure washers as explained in the general cleaning section above.

Always allow proper ventilation and respiratory protection when using chemical cleaners. Make sure that you follow the manufacturer's recommendations when using any cleaning products.

If all else fails, you can lightly sand the face of the deck board to remove the stain. Please note that over sanding may remove the indented grain pattern from the board.

Constant metal contact may produce rust stains on your deck. You should use a protective mat or plastic caps to protect against metal contact from sources such as furniture legs, BBQs or planter stands.

In order to avoid heavy grease staining if a large amount of cooking oil/fat is likely to fall from your BBQ on to the deck a protective mat placed over the decking and covering the area immediately around your BBQ is highly recommended.

Painting, surface sealing or "wet look" coating

CleverDeck Original does not require any painting over the life of the product and is not recommended. If over time you would like to darken or change the existing deck colour or apply a coating to seal the deck surface or add a sheen please call Futurewood on 1300 484 308 or email info@futurewood.com.au for details of the options available to you in your area.

Miscellaneous/pot plants/mats

Make sure that heavy items are well supported and positioned so that they are sitting above the joists/substructure. Constant loading on any individual deck board without immediate joist support may cause that board to sag. CleverDeck Original is not suitable for use as a structural support.

Pot plants should not be left in direct contact with the deck boards and should be elevated above the decking using pot plant feet to avoid the damp base of the pot being in constant contact with the surface of the deck board. Mats should not be left in the same position on the deck for any length of time as they can also trap moisture under them.

Futurewood Pty. Ltd.
Tel: 1300 484 308
A.B.N. 74 408 570 335
www.futurewood.com.au

Note: This document in its entirety is protected by Copyright®

August 2019

Care and maintenance recommendations may change without notice. For further information email info@futurewood.com.au.

1300 484 308

www.futurewood.com.au

