



CARE & MAINTENANCE

Please note: Frontier™ will need to be removed from the ceiling or wall to clean safely. Disassembly instructions for Frontier are available on the reverse.

Autex Interior Acoustics products are extremely durable and require little attention to maintain their good looks. Light vacuuming on a regular basis will prevent dust build-up, and most marks can be cleaned with a mild detergent solution followed by rinsing and blotting. Stains should be dealt with according to the chart below. Before carrying out a proposed cleaning method, apply to a concealed section to ensure it will not affect the product. Avoid severe abrasion. Vacuum to restore pile, but do not use a stiff brush.

NB: We do not recommend using solvent-based solutions on Autex Interior Acoustics products.

STAIN	TREATMENT GUIDE
Blood	A C
Burn/Scorch Mark	J
Chewing Gum	B C D H
Chocolate	B C D
Cooking Oils	B C D
Crayon/Colour Markers	B C D
Drinks (cola, tea, juices, beer etc.)	A C
Dust/Dirt	Vacuum, then I or C
Excrement	B C
Grass	C
Grease	B C D
Ink (ballpoint)	D
Ink (fountain)	A C
Lipstick	B C D
Mildew	C
Milk	A
Mud	B C
Nail Polish	A F
Oil	B C D
Paint (water-based)	A C E
Paint (oil-based)	A C D G
Sauces	B C D
Shoe Polish	B C D
Urine	A C
Vomit	A C D
Wine	A Add Salt C

KEY

- A Mop up excess as soon as possible with a sponge or cloth.
- B Remove surplus with a knife-edge or appropriate instrument.
- C Sponge with a solution of carpet shampoo working from well outside the stain in a circular motion towards the centre (this avoids spreading the stain). Sponge afterwards with clean, warm water and mop excess moisture with a clean, dry cloth or sponge. Allow to dry then brush gently with a soft brush. If any stain remains, sponge with a solution of one part household bleach to six parts clear water. Thoroughly rinse after treatment.
- D Lightly sponge with household dry cleaning fluid and blot. Apply sparingly, as the substance may have an adverse effect on the adhesive.
- E Lubricate the stain with glycerine or petroleum jelly.
- F Apply nail polish remover. The nail polish remover should not include lanolin or be of a greasy nature.
- G Sponge with turpentine (or substitute).
- H Freeze with ice cubes and scrape away while cold.
- I Clean with regular extractive carpet cleaner (if possible).
- J Use a circular cutter and remove the damaged portion.



NZ Freephone:
0800 24 36 37
Australia Freephone:
1800 24 36 37




NZ Freephone:
0800 744 272
Website:
www.enviro.co.nz

SPECIALIST FINISHES


Autex recommends that you contact professional cleaning experts should you require further assistance with the cleaning and maintenance of Autex Interior Acoustic products. Enviro Clean & Restoration have trialled their cleaning regime with the Interior Acoustics product range, and we recommend their service for our New Zealand customers. For Australia, ChemDry® have trialled their cleaning regime with the Interior Acoustics product range, and we recommend their service. For enquiries in the U.K., US or South East Asia contact your local account manager.

Autex Industries has no affiliation with Enviro Clean & Restoration or ChemDry® and are not responsible for any outcome of the service. The abovelisted treatments are intended as general guidance only. Results may vary depending on variables beyond the control of Autex Industries. Autex Industries accepts no responsibility or liability for any loss or damage which may arise from the implementation of the abovelisted treatments.

DISASSEMBLY INSTRUCTIONS

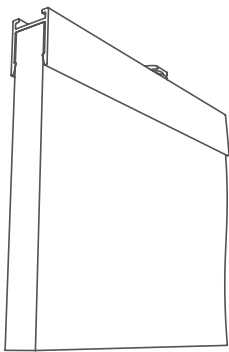


Locate the Frontier Connector clip, then using a flat head screwdriver or flat object, carefully pop the Connector handle out of Channel space.

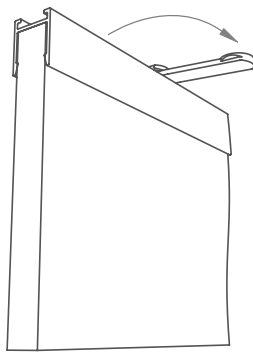

While taking the weight of the Frontier fin, turn the connector 90 Degrees.

Continue this process along the fin while maintaining the weight of the fin.

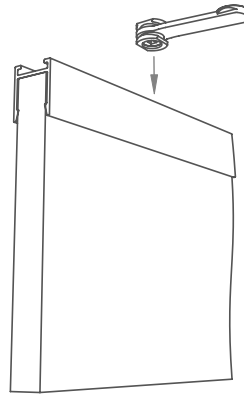

Once the connector clips are turned 90 degrees, the Frontier Channel can be disconnected from the ceiling.

Please note: If you are removing the Frontier fins for regular cleaning and maintenance, Autex recommends that you replace the Frontier Connector Clip after every ten cycles. If you require more Frontier Connector clips or any advice on installation, cleaning or maintenance, please contact your local Autex representative or visit www.autexindustries.com for more information.

Autex offers these recommendations in good faith. However, we cannot be responsible for unsatisfactory results from the proposed treatments.

Pat. Pending NZ 727634
UK 1621613.7
AU 2016273959

Autex Industries Ltd
702-718 Rosebank Rd,
Private Bag 19988,
Avondale 1746, Auckland,
New Zealand
Freephone **0800 428 839**
Phone **+64 9 828 9179**
Fax **+64 9 828 5810**
www.autex.co.nz

Autex Australia Pty Ltd
166 Barnfield Road,
PO Box 5099,
West Heidelberg, Melbourne,
VIC 3081, Australia
Freephone **1800 678 160**
Phone **+61 3 9457 6700**
Fax **+61 3 9457 1020**
www.autex.com.au

Autex Acoustics Ltd
Unit J4, Lowfields Way,
Lowfields Business Park,
Elland, West Yorkshire,
HX5 9Da,
United Kingdom
Phone **+44 (0) 1422 418899**
www.autexacoustics.co.uk

Autex Acoustics LLC
19350 Van Ness Avenue
Torrance, CA 90501
United States of America
Phone **+1(310)490-1591**
www.autexacoustics.com

**Autex Acoustics
Asia Sdn. Bhd**
03-05, Indah Walk 3,
Jalan Indah 15,
Taman Bukit Indah,
79100, Iskandar Puteri,
Johor
www.autexacoustics.asia

